

Instruction:


1. Install IPPT in main pipe flange connections keeping IPPT unit fixations (5) in place. Flow direction is indicated on the IPPT.
2. Remove fixations and install remaining 4 threaded rods.
3. Install either threaded or grooved pipe to the Foam Inlet (3).
4. Optional: Install test hose by replacing drain plug in Test Outlet connection (4) with the test hose.

Note: Contact Incendum for optional test hose, installation kit or drawings.

IMPORTANT:

The IPPT cannot be placed directly adjacent to a butterfly valve (or similar) because of its internal structure.

Do not remove drain plug in Test Outlet without replacing it with another secured connection.

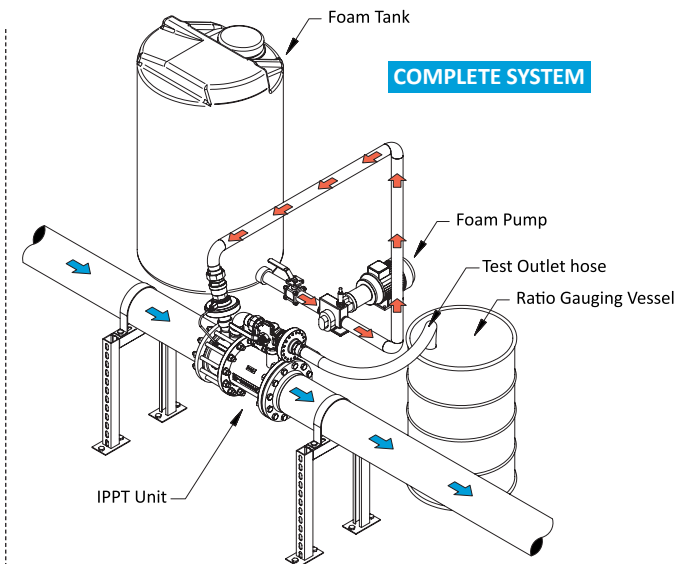

PARTS LIST, STANDARD

POS	TYPE
1 (Connection)	Wafer to flange, PN16 / 150 lbs
2 (Connection)	Flange, PN16 / 150 lbs
3 (Foam Inlet)	Threaded BSP Female and Grooved
4 (Test Outlet)	2" BSP Female
5 (Fixations)	4x Screw+Body Washer+Nut

See datasheet or general assembly drawing for measurements

PARTS LIST, INSTALLATION KIT

POS	TYPE
A	Nut
B	Washer
C	Threaded Rod
D	Gasket
E	Bolt