

## PLACEMENT OF ADV


When installing the drain valves, the placements should be as shown.

Ascending pipes should have a drain valve at least every 5 or 15 meters (altitude) from the system highpoint depending on model.

With mixed height piping systems the ADV should be placed at every low point as long as the height difference is no more than 5 or 15 meters depending on model.

The ADV can be mounted both horizontally or vertically, pointing down. Vertical mounting pointing down is preferred for draining.

### PLACEMENT OF ADV ON PIPE

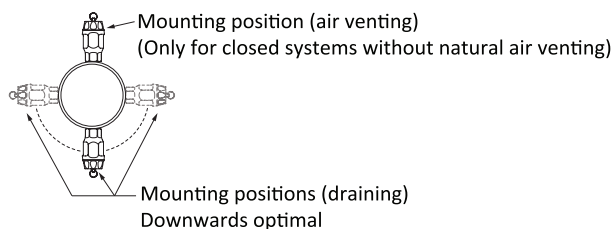

### PLACEMENT OF ADV IN SYSTEM

